

## Contactor Connection Diagram for devireg™ 530 / 531 / 532 / 535

The devireg™ 530 Series Thermostats have a limited switching capacity. Contactors are required whenever the heating load exceeds the thermostats capacity of 15 Amps.

When wiring to a contactor, the **Active** output of the thermostat *or L Load*, is used to energise the coil on the contactor through A2 terminal and the **Neutral** output of the thermostat *or N*, is used to energise the coil on the contactor through A1 terminal.

The **Active** feed from the Mains power is switched through the contactor at terminal 1 and the **Active** feed from the **Heating Cable** is switched through the contactor at terminal 2.

For a multi-pole contactor, multiple **Active** feeds from the Mains power are switched through the contactor at terminals 1, 3 & 5 etc, with the **Active** feeds from the **Heating Cables** switching through the contactor at terminals 2, 4 & 6 respectively.

A multiple pole contactor is required where there are multiple heater cables to be switched from the one thermostat *i.e. 1 zone but more than 1 heater*. Ensure that the number of heater cables connected to any one terminal does not exceed the current rating of the contactor. For example: If five heaters at 4,700W each are to be connected to a 3 pole 63A contactor, two heaters can be on two poles each and one on the other - **NOT three on one pole and one on the another pole**.

The **Neutral** load does not require to be returned through the thermostat. Simply join to the **Neutral** feed from the Mains power - as shown in the diagram below.

The **Earth** braid at both ends of the Heating Cable is simply joined to the **Earth** feed from the Mains power - as shown in the diagram below.

